


# Si photodiodes

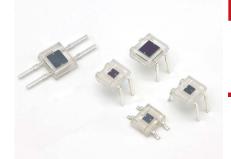

S5627-01 S4797-01 S2833-01 etc.

# Photodiodes molded into clear plastic packages

These are Si photodiodes molded into clear plastic packages. Two types are available with sensitivity in the visible range and in the visible to near IR range. Two photosensitive areas of  $1.3 \times 1.3$  mm and  $2.4 \times 2.8$  mm are also available. The S5627-01 provides a spectral response characteristic similar to the visible range sensitivity without using visual-compensated filters.

#### Features

- **S5627-01:** Visible range (Filterless type)
- S4797-01, S6931-01: Visible to near IR range (Suppressed IR sensitivity type)
- **S2833-01, S4011-06DS: Visible to near IR range**

#### - Applications

- **Exposure meters**
- **■** Illuminometers
- Stroboscope light control
- Copier
- Display light control
- Optical switches, etc.

#### Structure / Absolute maximum ratings

Type no.		Dimensional outline		Effective	Absolute maximum ratings				
	Package		Photosensitive area size		Reverse voltage VR max	Operating temperature Topr	Storage temperature Tstg		
			(mm)	(mm²)	(V)	(°C)	(°C)		
S5627-01		(1)	1.3 × 1.3	1.6		-25 to +85*1	-40 to +100*1		
S6931-01	DID type	(2)	2.4 × 2.8	6.6					
S4797-01	DIP type	(3)	1.3 × 1.3	1.6	10				
S2833-04		(2)	2.4 × 2.8	6.6	10				
S2833-01	Surface mount type	(4)	2.4 × 2.8	6.6					
S4011-06DS	Surface mount type	(5)	1.3 × 1.3	1.6					

<sup>\*1:</sup> No dew condensation

When there is a temperature difference between a product and the surrounding area in high humidity environment, dew condensation may occur on the product surface. Dew condensation on the product may cause deterioration in characteristics and reliability.


Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.

#### **■** Electrical and optical characteristics (Typ. Ta=25 °C, unless otherwise noted)


Type no.	Spectral response range $\lambda$		Photosensitivity S (A/W)		Infrared sensitivity	current	Temp. coefficient of	Dark current ID	Temp. coefficient of	Rise time tr	Terminal capacitance Ct	Shunt resistance Rsh		
Type no.			λр	GaP LED	He-Ne Laser	ratio	Isc 100 lx	Isc	V <sub>R</sub> =1 V Max.	Id Tcid	$V_R=0 V$ $R_L=1 k\Omega$	VR=0 V f=10 kHz	VR=1 Min.	.0 mV Typ.
	(nm)	(nm)		560 nm	633 nm	(%)	(µA)	(%/°C)	(pA)	(times/°C)	(µs)	(pF)	$(G\Omega)$	$(G\Omega)$
S5627-01	320 to 840	540	0.3	0.28	0.2	35	0.25	0.25	50	1.13	2	700	0.5	5
S6931-01	320 to	720	0.48	0.4	0.45		4.2	0.1	20	1 12	0.5	200	10	- FO
S4797-01	1000	000 720	0.4		0.37	-	1.2	0.1 2	20	1.12	0.2	50	10	50
S2833-04	220 +-			0.33			6.5				2.5	700		100
S2833-01	320 to 1100	960	0.58	0.55	0.38	-	0.5	0.1	10	1.12	2.5	700	10	100
S4011-06DS	1100						1.9				0.5	200		250

This product does not support lead-free soldering temperature. For details on reflow soldering conditions for surface-mount conponents, please contact our sales office.

# Spectral response

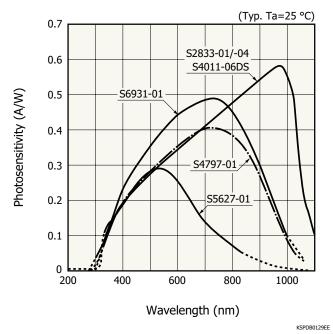


#### - Rise time vs. load resistance

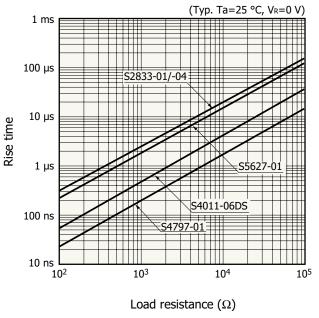


KSPDB0130EE

## - Dark current vs. reverse voltage

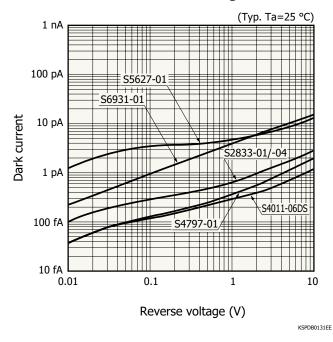


# - Shunt resistance vs. ambient temperature

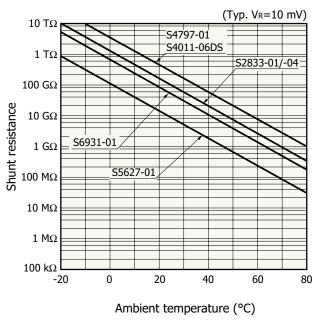


KSPDB0132EE

## Dimensional outlines (unit: mm)

#### (1) S5627-01

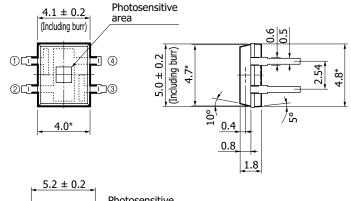

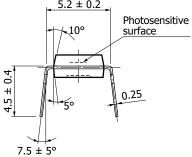

- ① Cathode ② NC ③ Anode ④ NC (short lead)

Tolerance unless otherwise noted: ±0.1 Position accuracy of photosensitive area center with respect to the package dimensions marked \*


X, Y≤±0.2

θ≤±2°

NC terminal should be open-circuited at use.


KSPDA0119EC

#### (2) S6931-01, S2833-04

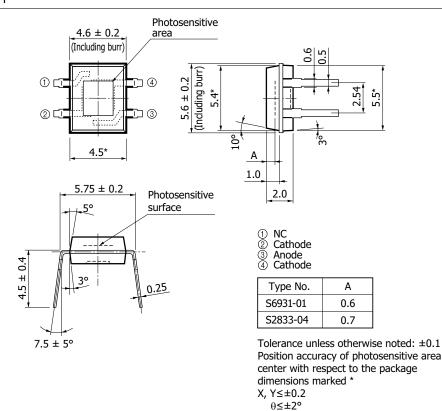




#### (3) S4797-01

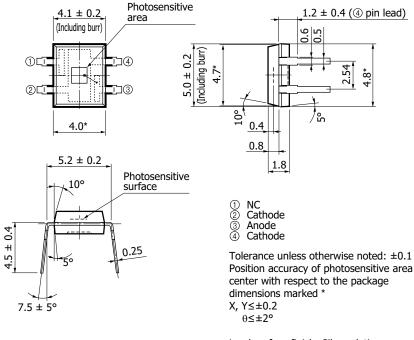

Lead surface finish: Silver plating Standard packing: Stick (50 pcs/stick)

KSPDA0121EC

# (4) S2833-01

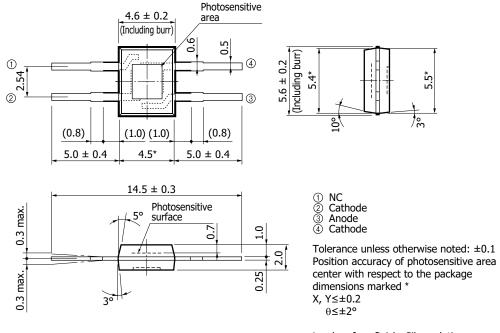


Lead surface finish: Silver plating Standard packing: Stick (50 pcs/stick)

KSPDA0123EC



#### (5) S4011-06DS

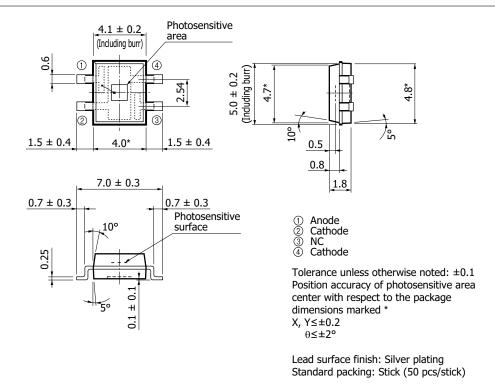

#### Related information

www.hamamatsu.com/sp/ssd/doc\_en.html

- Precautions
- · Disclaimer
- · Metal, ceramic, plastic package products
- · Surface mount type products
- Technical note
- · Si photodiode

Information described in this material is current as of January 2023.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.

# AMAMATSU

www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81)53-434-3311, Fax: (81)53-434-5184

IL2C-1 ICRIINO-CRO, HIgasRi-KU, Hamamatsu City, 4:35-8558 Japan, Telephone: (19)08-231-0960, fax: (1)908-231-1218

Germany: HAMAMATSU CORPORATION: 360 Footbill Road, Bridgewater, NJ 08807, U.S.A., Telephone: (1)908-231-0960, fax: (1)908-231-1218

Germany: HAMAMATSU PHOTONICS DEUTSCHLAND GMBH: Arzbergersts. 10, 82211 Herrsching am Ammersee, Germany; Telephone: (49)8152-375-0, Fax: (49)8152-265-8 E-mail: info@hamamatsu.de

France: HAMAMATSU PHOTONICS FRANCE S.A.R.L.: 19 Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France; Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10 E-mail: info@hamamatsu.df

United Kingdom: HAMAMATSU PHOTONICS IX LIMITED: 2 Howard Court, 10 Tewin Road, Webwyn Gard, Howen Karbine, AL7 18W, IX, Telephone: (44)1707-294888, Fax: (44)1707-295777 E-mail: info@hamamatsu.co.uk

North Europe: HAMAMATSU PHOTONICS NORDEN AB: Torshamnsgatan 35, 16440 Kista, Sweden, Telephone: (46)8-509-031-00, Fax: (46)8-509-031-01 E-mail: info@hamamatsu.df

Italy: HAMAMATSU PHOTONICS (TAILA S.R.L.: Strada della Moia, 1 int. 6 20044 Arese (Milano), Italy, Telephone: (39)02-93 58 17 37, Fax: (39)02-93 58 17 41 E-mail: info@hamamatsu.df

China: HAMAMATSU PHOTONICS (CHINN) CO, LTD: 1201, Tower B, Jiaming Center, 27 Dongsanhuane Beilu, Chaoyang District, 100020 Beijing, RR. China; Telephone: (86)10-6586-6086, Fax: (86)10-6586-2866 E-mail: hpc@hamamatsu.com.cn

Taiwan: HAMAMATSU PHOTONICS TAIWAN CO, LTD: 1201, Tower B, Jiaming Center, 27 Dongsanhuane Beilu, Chaoyang District, Hsinchu, 300, Taiwan R.O.C. Telephone: (86)3-659-0080, Fax: (86)3-659-0081 E-mail: info@hamamatsu.com.cn