

X-RAY MICROFOCUS X-RAY SOURCE L9631



FEATURES

- ●High power: Maximum output 800 μA (50 W)
- High stability
- No high voltage cable connection required High voltage power supply is integrated.
- External control via RS-232C interface

APPLICATIONS

- ●In-line X-ray inspection
- Non-destructive inspection
- X-ray CT

[Applicable objects]

- Electronic component
- Printed circuit board
- Plastic component
- Metal component
- •Food
- Beverage
- Medicine & drug
- Bioproduct





GENERAL

Parameter	Description / Value	Unit
X-ray tube voltage setting range	0 to 110	kV
X-ray tube current setting range	0 to 800	μΑ
X-ray tube voltage operational range 10	40 to 110	kV
X-ray tube current operational range ^①	10 to 800	μΑ
Maximum output	50	W
X-ray focal spot size (Nominal value) ^②	15 to 80	μm
X-ray output window material / Thickness	Beryllium/0.5	mm
X-ray beam angle ³	Approx. 62	degree
Focus to object distance (FOD)	Approx. 16.8	mm
Target material	Tungsten	_
Weight ⁽⁴⁾	Approx. 11.5	kg
Communication method	Interface: RS-232C (9-pin D-sub connector)	_

RATINGS

Parameter	Description / Value	Unit
Input voltage (AC)	Single phase 100 to 240 (50 Hz / 60 Hz)	V
Power consumption	Less than 240	W
Rated output	Continuous rating	_
Operating ambient temperature	+10 to +40	°C
Storage ambient temperature	0 to +50	°C
Operating and storage humidity	20 to 85 (No condensation)	%

REGULATION AND STANDARDS

Parameter	Description	Unit
RoHS directive	EN 50581 Category 9	
EMC	IEC/EN 61326-1 Emission limits: CISPR 11 Group 1 Class A	_
	Immunity requirements: Table 2	
Safety	IEC/EN 61010-1	_

CONTROL SOFTWARE ⁵

Parameter	Description	Unit
Applicable PC	PC / AT compatible	_
Applicable OS	Windows® XP, 7	_
Interface	RS-232C interface	_

NOTE: ①See the graph of the X-ray tube voltage / current operation range.

- ②This focal spot size changes depending on the output.
- 3Reference value: With 50 % of maximum X-ray emission.
- 4)This weight includes the accessories of approx. 0.3 kg.
- ⑤The control software is provided as a sample software for the purpose of MFX operation.

The performance of the software is not guaranteed.




PRECAUTIONS TO USE

· This microfocus X-ray source generates X-rays harmful to the human body. Use sufficient caution when handling the equipment to avoid direct or inadvertent exposure to X-rays. Install the X-ray source or the X-ray tube unit in an X-ray shielded cabinet or room equipped with safety interlock functions to prevent accidental exposure to X-rays.

OPERATIONAL CAUTION


- · This microfocus X-ray source generates X-rays and must therefore be used only under the supervision of qualified personnel.
- This microfocus X-ray source shall be used in compliance with health and safety regulations enforced in order to prevent health hazards problems due to ionizing radiation.


X-RAY TUBE VOLTAGE / CURRENT OPERATION RANGE

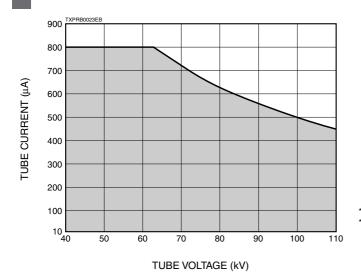

- * The X-ray tube voltage guaranteed range is 40 kV to 110 kV. * Operation is not guaranteed when the tube current is below 10 $\mu A.$

DIMENSIONAL OUTLINE (Unit: mm)

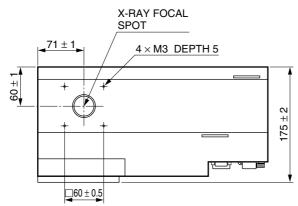

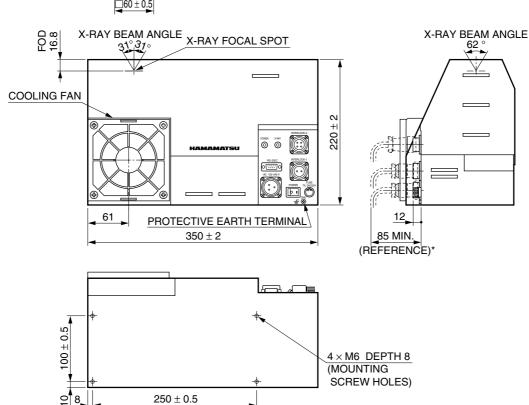

* Connection cables aren't included.



X-RAY IMAGE INTENSIFIER DIGITAL CAMERA UNIT C7336-05/-52

The C7336 series consist of a high resolution, high contrast 4-inch X-ray image intensifier (X-ray I.I.) and a 2.8 megapixel CMOS image sensor.

The X-ray I.I. used has a fixed field-of-view of 100 mm diameter or a 4 inches/2 inches adjustable field-of-view and an input window made of thin aluminum which is excellent in X-ray transmission and causes less scattering of X-rays. These features allow real-time detection at X-ray energy levels from about 20 keV.

The captured images can be transferred to PC directly by interface of IEEE1394b.



X-CUBE™ (COMPACT X-RAY CCD CAMERA) H8480, H8481, H8953

X-CUBEs are compact X-ray CCD camera designed for non-destructive inspection, which make X-ray imaging as easy as an ordinary CCD camera in handling. The H8480 and H8953 use a 2/3 type CCD coupled to large-diameter tapered FOPs which are coated with Csl. The H8481 uses a straight type FOP instead of the large FOP, achieving a high resolution of 20 Lp/mm.




Left: H8480 Center: H8953 Right: H8481

FOS (Fiber optic plate coated with X-ray scintillator)

The FOS is an optical device for X-ray imaging, fabricated by coating an X-ray scintillator material over a fiber optic plate consisting of more than tens of million glass fibers each a few micrometers in diameter. The FOS provides higher sensitivity and resolution than currently used sensitized paper films and also allows real-time digital radiography when directly coupled to a commercially available CCD. The fiber optic plate used in the FOS has excellent X-ray absorption characteristics, so that X-rays penetrating the X-ray scintillator and directly entering the CCD are minimized to less than 1 %. This protects the CCD from the deterioration and increased noise caused by X-ray irradiation, assuring a long service life and maintaining high image quality. Various sizes and shapes of FOS are available to meet your particular needs, including tapered FOP types.



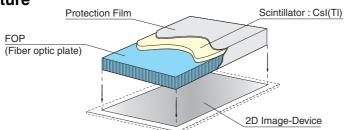



Windows® is a registered trademark of Microsoft Corporation in the United States and/or other countries. Other product and software names mentioned herein may be either registered trademarks or trademarks of their respective owners.

Subject to local technical requirements and regulations, availability of products included in this promotional material may vary. Please consult with our sales office. Information furnished by HAMAMATSU is believed to be reliable. However, no responsibility is assumed for possible inaccuracies or omissions. Specifications are subject to change without notice. No patent rights are granted to any of the circuits described herein. ©2015 Hamamatsu Photonics K.K.

HAMAMATSU PHOTONICS K.K. www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Electron Tube Division

314-5, Shimokanzo, Iwata City, Shizuoka Pref., 438-0193, Japan, Telephone: (81)539/62-5248, Fax: (81)539/62-2205

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, Bridgewater. N.J. 08807-0910, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218 E-mail: usa@hamamatsu.com
Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-2575-0, Fax: (49)8152-2658 E-mail: info@hamamatsu.de
France: Hamamatsu Photonics France S.A.F.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (3)1 69 53 71 0, Fax: (33)1 69 53 71 0, Fax: (31)1 69 53 71 0 E-mail: info@hamamatsu.fr
United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tevin Road, Welwyn Garden City, Hertfordshire ALZ 1BW, United Kingdom, Telephone: (44)1707-294888, Fax: (44)1707-325777 E-mail: info@hamamatsu.co.uk North Europe: Hamamatsu Photonics Norden AB: Torshamnsgatan 35 SE-164 40 Kista, Sweden, Telephone: (46)8-509-031-00, Fax: (46)8-509-031-01 E-mail: info@hamamatsu.se Italy: Hamamatsu Photonics Italia S.r.l.: Strada della Moia, 1 int. 6, 20020 Arese (Milano), Italy, Telephone: (39)02-93581733, Fax: (39)02-93581741 E-mail: info@hamamatsu.it China: Hamamatsu Photonics (China) Co., Ltd.: B1201 Jiaming Center, No.27 Dongsanhuan Beilu, Chaoyang District, Beijing 100020, China, Telephone: (86)10-6586-6006, Fax: (86)10-6586-2866 E-mail: hpc@hamamatsu.com.cn

TXPR1014E02 NOV. 2015 IP