


InGaAs PIN photodiodes

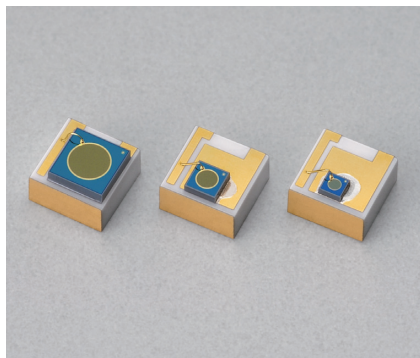

G15553 series

Sub-mount type photodiodes for LD monitor

Features

- Photosensitive area
G15553-003C: $\phi 0.3$ mm
G15553-005C: $\phi 0.5$ mm
G15553-010C: $\phi 1$ mm
- Miniature package: 2 × 2 × 1 mm
- Precise chip position tolerance: ± 0.075 mm

Applications

- LD monitor

Structure

Parameter	G15553-003C	G15553-005C	G15553-010C	Unit
Photosensitive area	$\phi 0.3$	$\phi 0.5$	$\phi 1$	mm
Package	Ceramic			-

Absolute maximum ratings

Parameter	Symbol	Remark	G15553-003C	G15553-005C	G15553-010C	Unit
Reverse voltage	V_R max		20	20	10	V
Operating temperature	T_{opr}	No dew condensation*	-40 to +85			°C
Storage temperature	T_{stg}		-55 to +125			°C

* When there is a temperature difference between a product and the surrounding area in high humidity environments, dew condensation may occur on the product surface. Dew condensation on the product may cause deterioration in characteristics and reliability.


Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.

Electrical and optical characteristics (Ta=25 °C)

Parameter	Symbol	Condition	G15553-003C			G15553-005C			G15553-010C			Unit
			Min.	Typ.	Max.	Min.	Typ.	Max.	Min.	Typ.	Max.	
Spectral response range	λ		0.9 to 1.7			0.9 to 1.7			0.9 to 1.7			μm
Photosensitivity	S	$\lambda=1.3 \mu\text{m}$	0.8	0.9	-	0.8	0.9	-	0.8	0.9	-	A/W
		$\lambda=1.55 \mu\text{m}$	0.9	1.1	-	0.9	1.1	-	0.9	1.1	-	
Dark current	I_D	$V_R=5$ V	-	0.1	0.5	-	0.15	0.75	-	0.8	4	nA
Temperature coefficient of I_D	$\Delta T I_D$	$V_R=1$ V	-	1.09	-	-	1.09	-	-	1.09	-	times/°C
Shunt resistance	Rsh	$V_R=10$ mV	200	1000	-	80	400	-	25	125	-	M Ω
Terminal capacitance	C_t	$V_R=5$ V $f=1$ MHz	-	5	7.5	-	15	20	-	55	120	pF
Cutoff frequency	f_c	$V_R=5$ V $R_L=50 \Omega$	450	600	-	160	200	-	25	60	-	MHz
Noise equivalent power	NEP	$\lambda=\lambda_p$	-	4×10^{-15}	2×10^{-14}	-	7×10^{-15}	2×10^{-14}	-	2×10^{-14}	4×10^{-14}	W/Hz ^{1/2}
Detectivity	D^*	$\lambda=\lambda_p$	2.4×10^{12}	6.3×10^{12}	-	2.4×10^{12}	6.3×10^{12}	-	2.4×10^{12}	6.3×10^{12}	-	cm ² ·Hz ^{1/2} /W


The G15553 series may be damaged by electrostatic discharge, etc. Be careful when using the G15553 series.

Spectral response

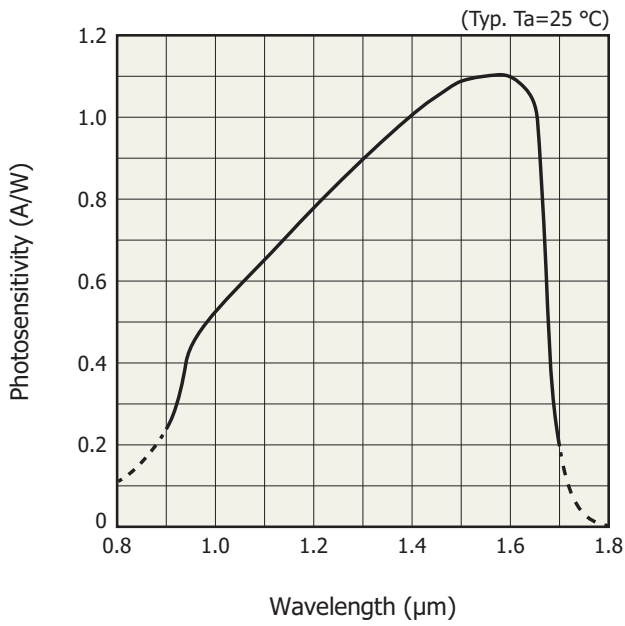


KIRDB0692EA

Sensitivity temperature characteristics

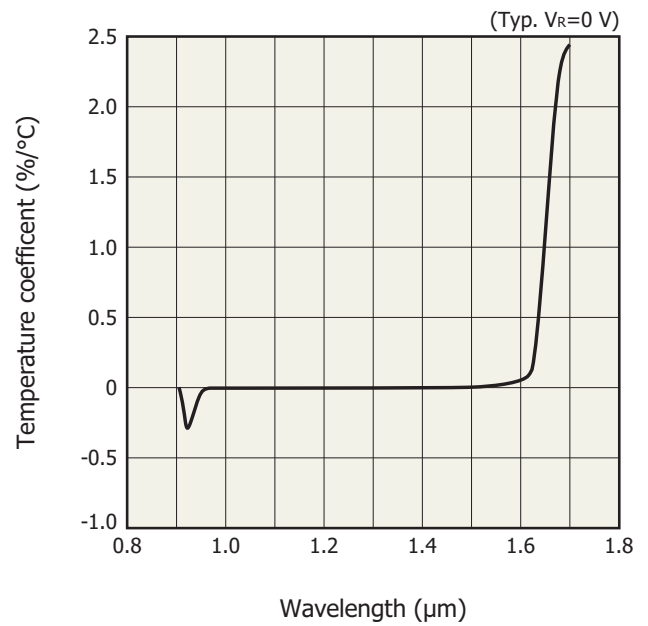


KIRDB0636EA

Dark current vs. reverse voltage

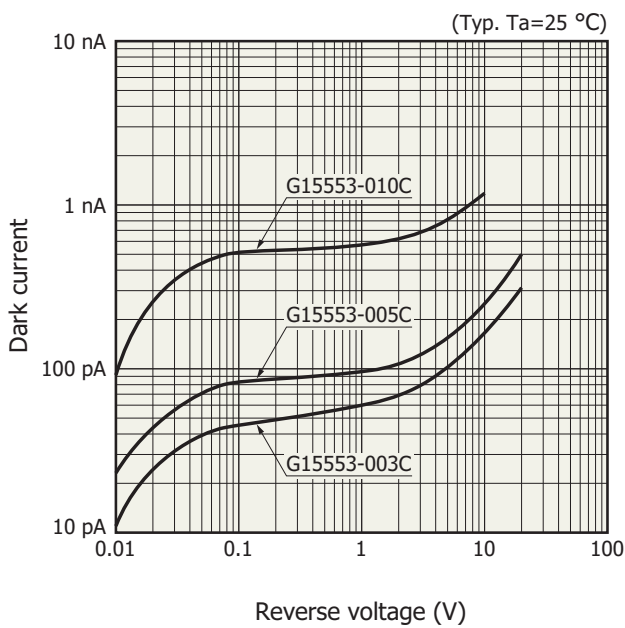

KIRDB0693EA


Terminal capacitance vs. reverse voltage

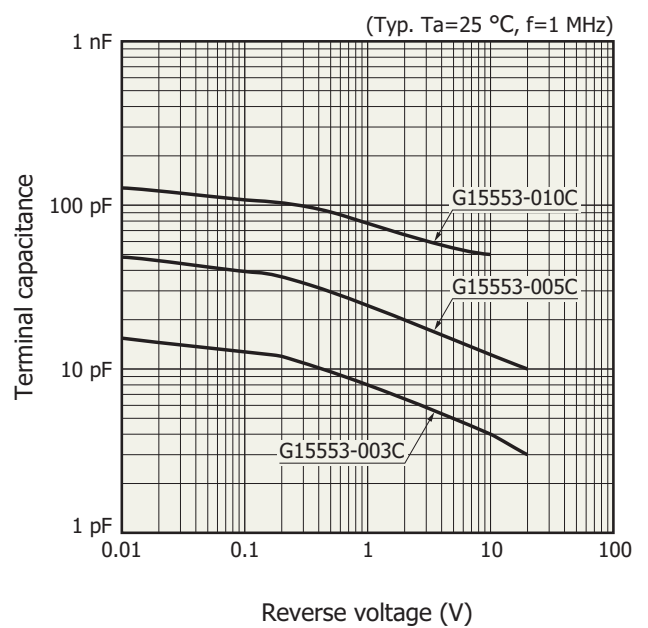

KIRDB0694EA


Dimensional outlines (unit: mm)

G15553-003C

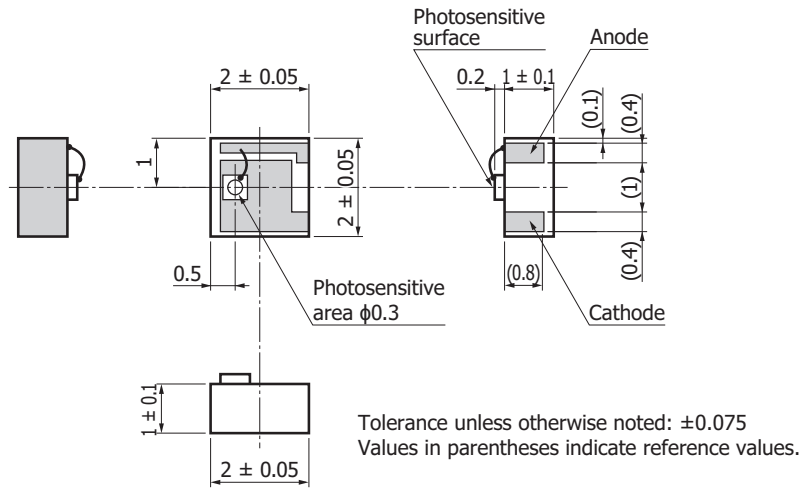


KIRDA0273EB

G15553-005C

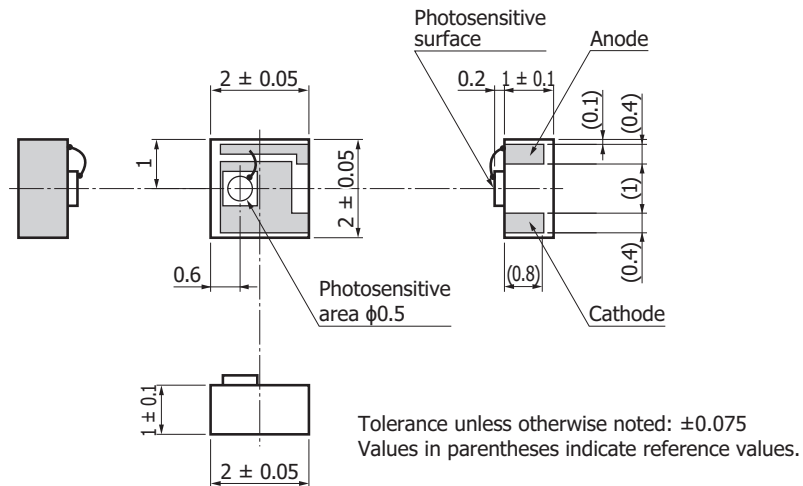

KIRDA0274EB

G15553-010C

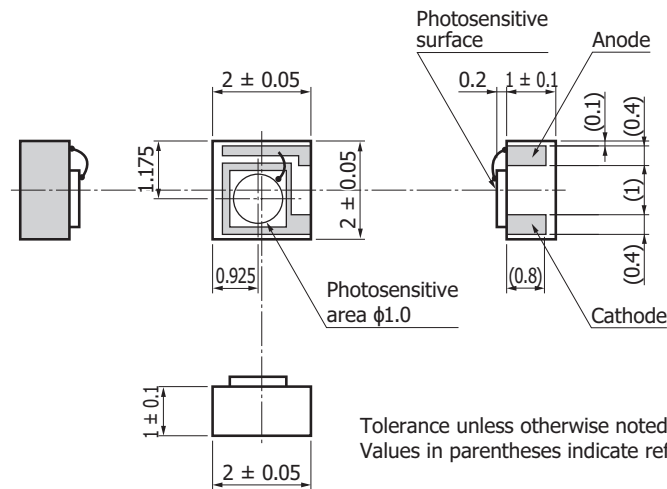

KIRDA0275E8

Related information

www.hamamatsu.com/sp/ssd/doc_en.html

Precautions

- Disclaimer
- Safety consideration
- Surface mount type products
- Unsealed products

Technical information

- Compound semiconductor photosensors / Technical note

Information described in this material is current as of December 2021.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.

HAMAMATSU

www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81)53-434-3311, Fax: (81)53-434-5184

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, Bridgewater, N.J. 08807, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218, E-mail: usa@hamamatsu.com

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, 82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-265-8, E-mail: info@hamamatsu.de

France: Hamamatsu Photonics France S.A.R.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10, E-mail: infos@hamamatsu.fr

United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, UK, Telephone: (44)1707-294888, Fax: (44)1707-325777, E-mail: info@hamamatsu.co.uk

North Europe: Hamamatsu Photonics Norden AB: Torshamnsgatan 35 16440 Kista, Sweden, Telephone: (46)8-509 031 00, Fax: (46)8-509 031 01, E-mail: info@hamamatsu.se

Italy: Hamamatsu Photonics Italia S.r.l.: Strada della Moia, 1 int. 6, 20044 Arese (Milano), Italy, Telephone: (39)02-93 58 17 33, Fax: (39)02-93 58 17 41, E-mail: info@hamamatsu.it

China: Hamamatsu Photonics (China) Co., Ltd.: 1201 Tower B, Jiaming Center, 27 Dongsanhuan Bellu, Chaoyang District, 100020 Beijing, P.R.China, Telephone: (86)10-6586-6006, Fax: (86)10-6586-2866, E-mail: hpc@hamamatsu.com.cn

Taiwan: Hamamatsu Photonics Taiwan Co., Ltd.: 8F-3, No. 158, Section2, Gongdao 5th Road, East District, Hsinchu, 300, Taiwan R.O.C. Telephone: (886)3-659-0080, Fax: (886)3-659-0081, E-mail: info@hamamatsu.com.tw