


Light emitting/receiving module

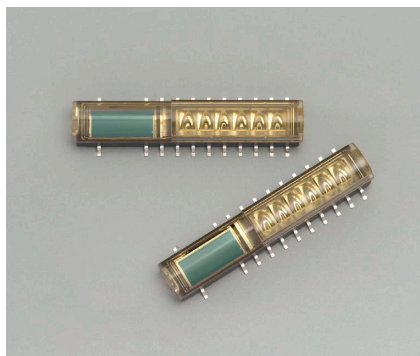

P8212

Integrated light emitting/receiving elements for automobile VICS

P8212 is a light emitting/receiving module consisting of an LED array and a photodiode in the same small package. The width of this module is minimized so that automobile antennas can be designed thin. A lens is also fitted onto the photodiode to increase the amount of input light. Although the lens makes the photodiode directivity narrow, this problem was solved by separating the photodiode optical axis from the LED axis to match the light emitting and receiving areas required for VICS.

Features

- Small package
- Lens design optimized for light emitting/receiving timings
- Cylindrical lens with less pickup error during component mounting

Applications

- Automobile VICS

Absolute maximum ratings (Ta=25 °C)

Parameter	Symbol	Value	Unit
Photodiode reverse voltage	V _R Max.	20	V
LED reverse voltage	V _R Max.	4	V
LED pulse forward current *1	I _{FP}	1300	mA
Operating temperature	T _{opr}	-30 to +95	°C
Storage temperature	T _{stg}	-40 to +115	°C

*1: 64 kHz, duty ratio=50 %, 4 ms ON, average duty ratio=2.5 %

Electrical and optical characteristics for photodiode (Ta=25 °C)


parameter	Symbol	Condition	Min.	Typ.	Max.	Unit
Spectral response range	λ		-	480 to 1100	-	nm
Peak sensitivity wavelength	λ_p		-	960	-	nm
Photo sensitivity	S	$\lambda = \lambda_p$	520	620	-	mA/W
		$\lambda = 850 \text{ nm}$	460	540	-	mA/W
Short circuit current	I _{SC}	100 lx, 2856 K	27	33	-	μA
Dark current	I _D	V _R =12 V	-	1	10	nA
Cutoff frequency	f _c	V _R =12 V, R _L =1 k Ω $\lambda = 850 \text{ nm}$, -3dB	-	4	-	MHz
Terminal capacitance	C _t	V _R =12 V, f=1 MHz	-	40	-	pF
Directivity at half width	-	Direction in long side	-	± 55	-	degree
		Direction in short side	-	+35, -18	-	

Electrical and optical characteristics for LED (Ta=25 °C)


parameter	Symbol	Condition	Min.	Typ.	Max.	Unit
Peak emission wavelength	λ_p	$I_F=100\text{ mA}$	830	850	900	nm
Spectral half width	$\Delta\lambda$	$I_F=100\text{ mA}$	-	40	-	nm
Pulse forward voltage	V_{FP}	$I_{FP}=900\text{ mA}^{*2}$	5.5	6.3	7.4	V
Reverse current	I_R	$V_R=4\text{ V}$	-	-	10	μA
Pulse radiant intensity	I_{ep}	$I_{FP}=900\text{ mA}^{*2}$	1400	1800	-	mW/sr
Cutoff frequency	f_c	$I_F=100\text{ mA}\pm 10\text{ mAp-p}$	-	20	-	MHz
Directivity at half width	-	Direction in long side	-	± 30	-	degree
		Direction in short side	-	± 13	-	

*2: Average peak value in pulse operation at 64 kHz, 50 % duty ratio, 4 ms ON


Emission spectrum

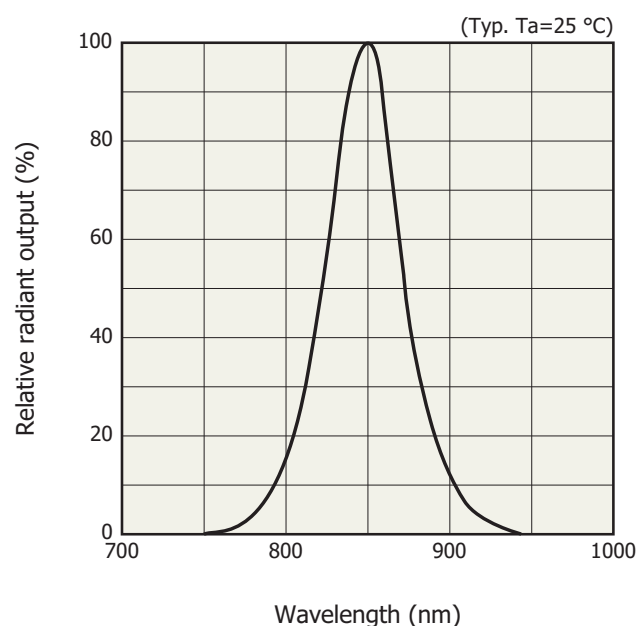


Radiant intensity vs. pulse forward current (LED)

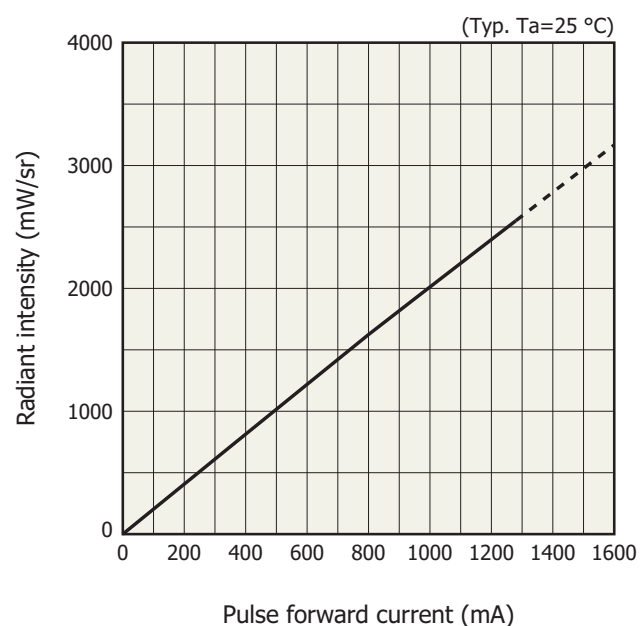


Directivity: direction in short side

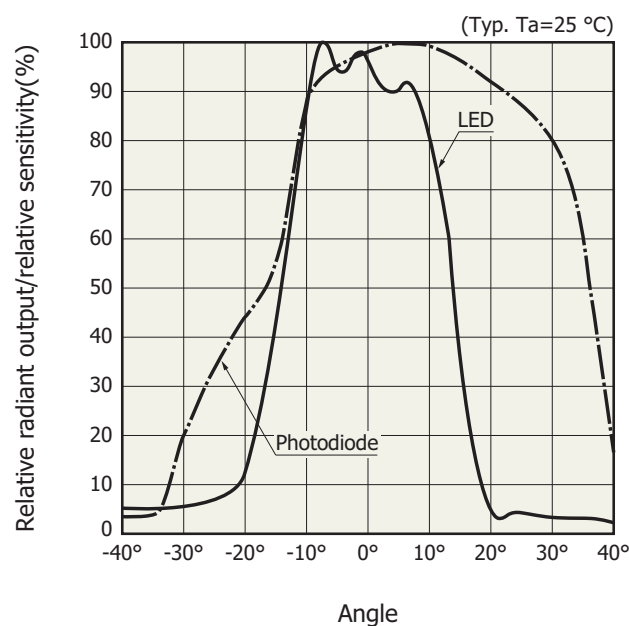

Directivity: direction in long side

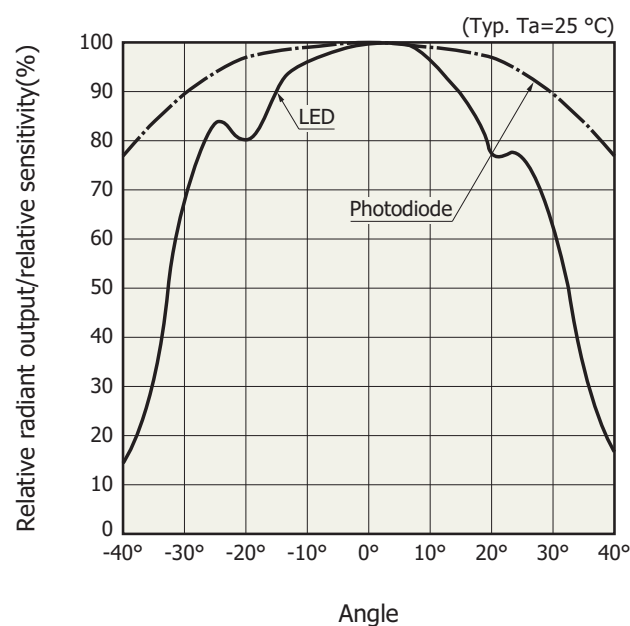


Pulse forward voltage vs. pulse forward current (LED)

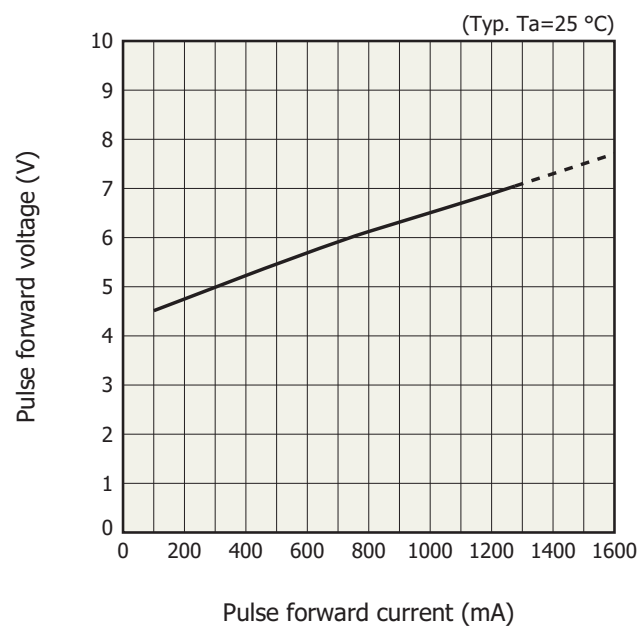

KPCB0024EB

Dimensional outline (unit: mm)

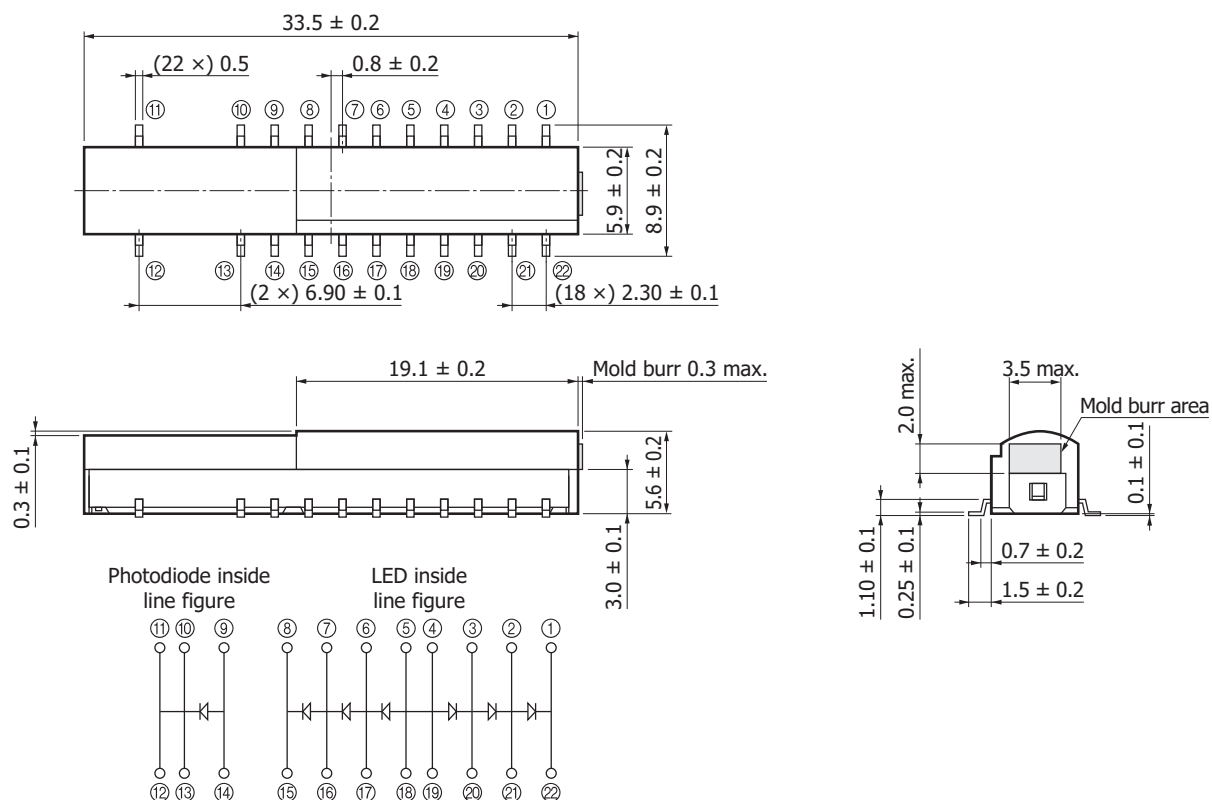

KPCA0008EB

Information described in this material is current as of September 2017.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.

HAMAMATSU

www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81) 53-434-3311, Fax: (81) 53-434-5184

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, Bridgewater, N.J. 08807, U.S.A., Telephone: (1) 908-231-0960, Fax: (1) 908-231-1218

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49) 8152-375-0, Fax: (49) 8152-265-8

France: Hamamatsu Photonics France S.A.R.L.: 19, Rue du Saule Trépu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: 33-(1) 69 53 71 00, Fax: 33-(1) 69 53 71 10

United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, United Kingdom, Telephone: (44) 1707-294888, Fax: (44) 1707-325777

North Europe: Hamamatsu Photonics Norden AB: Torshamnsgatan 35 16440 Kista, Sweden, Telephone: (46) 8-509-031-00, Fax: (46) 8-509-031-01

Italy: Hamamatsu Photonics Italia S.r.l.: Strada della Moia, 1 int. 6, 20020 Arese (Milano), Italy, Telephone: (39) 02-93581733, Fax: (39) 02-93581741

China: Hamamatsu Photonics (China) Co., Ltd.: B1201, Jiaming Center, No.27 Dongsanhuan Beilu, Chaoyang District, Beijing 100020, China, Telephone: (86) 10-6586-6006, Fax: (86) 10-6586-2866